Installing Dell Inspiron 530

Installing RAM

SUMMARY

This guide will demonstrate removing the computer's RAM.

Step 1 — Case

- Place the case on its side.
- Locate and remove the two 13.1 mm thumbscrews.
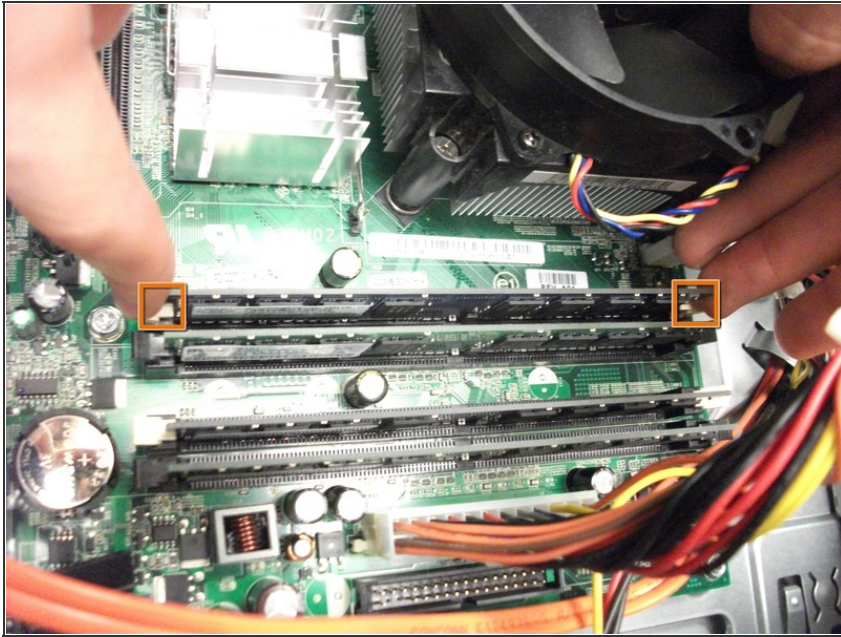
Step 2

- Slide side panel towards the back and remove.

Step 3 — Installing RAM

- Locate the four sticks of RAM.

Step 4

- Locate the two plastic tabs on the ends of a RAM stick.

- Press down on the two tabs together until RAM stick is ejected.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2012-10-31 03:39:02 AM.